

# Quick Start Guide

## Gravity Pump In-Use



**TIP:** Ensure there is appropriate space for delivered product in tank prior to and during delivery.

## GRAVITY DELIVERIES

### Batch (Preset Partial Delivery) & Full-Compartment Delivery (via Batch)



1 Press "MENU" twice.



2 To program batched delivery:  
a. **Batch** > **ARROWS** > **OK**  
b. **Full Comp** > **ALL** > **OK**



3 Connect API and product-delivery elbows as required.  
4 Select "GRAV" on the DFV-Swift screen.



5 Open the foot valves by pressing the "FOOT VALVES" button on the Swift-Mx Box.  
6 Physically open API and product-delivery elbows, as required.  
7 Once product is dispensed, the data will show on the **DELIVERY** screen.



8 Product is dispensed, monitor delivery. **NOTE:** The flow will stop once product in compartment has been delivered or preset is reached.  
9 Physically close the APIs and **confirm** the close on the DFV-Swift screen. This will reopen the foot valves and flood the pipework.  
10 Select "PRINT" to complete delivery and print docket.

### Single-Compartment Drop (Manual Partial Delivery) & Multi-Compartment Drop (Partial or Full)



1 Connect API and product delivery elbow, as required.  
2 Select "GRAV" on the DFV-Swift screen.



3 Open the foot valves by pressing the "FOOT VALVES" button on the Swift-Mx Box and physically open the first API and product-delivery elbows, as required.



4 Once product is dispensed, the data will show on the **DELIVERY** screen.  
5 Product is dispensed, monitor delivery. **For Multi-Compartment**, open the remaining API outlets.




6 Select "STOP" to stop the flow of product.

7 Physically close the API and confirm the close on the DFV-Swift screen. This will reopen the foot valves and flood the pipework.  
8 **NOTE: For Multi-Compartment**, select "MULTI" on the DFV-Swift screen. Select "PRINT" to complete delivery and print docket.

# Quick Start Guide

## Bulk & Hose Reel Pump In-Use

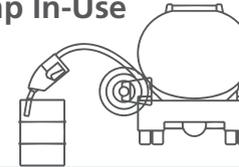

**TIP:** Ensure there is appropriate space for delivered product in tank prior to and during delivery.

## BULK DELIVERIES (DIESEL) & HOSE-REEL DELIVERIES (DIESEL/PETROL)

### Single-Compartment Drop (Manual Partial Delivery) & Multi-Compartment Drop (Partial or Full)

**NOTICE:** Steps 1 through 4 apply only to Batch (Preset Partial Delivery) and Batch (Full-Compartment Delivery). For Manual deliveries, proceed to Step 4.



**1** Press "MENU" twice.



**2** To program batched delivery:  
 a. **Batch** > **ARROWS** > **OK**  
 b. **Full Comp** > **ALL** > **OK**



**3** Press "MENU" to return to the HOME screen.



**4** Select "BULK", "DISL" or "PTRL" on the DFV-Swift.



**5** Verify if the manifold has product in it and select "DRY" or "FULL."



**6** Hold the "MANIFOLD VALVE" and "SELECTED COMPARTMENT" buttons for three (3) seconds.



**7** Turn on the pump and product is dispensed via bulk outlet (BULK) or nozzle (Diesel or Petrol).

**8** Monitor delivery quantity and end the delivery using the PIPE or STOP option outlined per instructions to the right.

**9** Select "COMP" to complete a multi-compartment delivery on a single docket  
 OR  
 Select "PRNT" to end the delivery and print docket.

**NOTICE:** There are two options for ending a delivery, "PIPE" OR "STOP."

**PIPE** = End delivery and purge manifold pipework.

Purging the pipework will deliver all remaining product in the pipework via the bulk or nozzle used.

**STOP** = End delivery and leave product in the manifold pipework.

**HINT:** Before product changeover occurs, e.g., switching from Diesel to Petrol, the manifold should be empty (dry). The best time to empty the manifold is at the end of a delivery. Use the "PIPE" option to purge the manifold pipework.

**TIP:** Key Considerations:

- The delivery will stop once the 200L remaining level is reached. You will be prompted to verify that you are able to deliver the remaining amount.
- Confirm if the compartment has been emptied upon completion of delivery.

## DUAL-TRAILER CONFIGURATION

### OPTION 1: Enable Delivery via Trailer B



If the DFV-Swift displays "DESELECTED," it means you are using a dual-trailer configuration.



**1** Pull out "TRANSFER VALVES" button on the Trailer B Swift-Mx Box.

### OPTION 2: Enable Delivery via Trailer A



**1** Press down on the "MANIFOLD VALVE" and "TRANSFER VALVES" buttons for three (3) seconds for the Trailer B Swift-Mx Box.

**2** To complete a Gravity, Bulk or Hose Reel (Diesel or Petrol) delivery, refer to GRAVITY, BULK DELIVERIES AND HOSE-REEL DELIVERIES sections.